
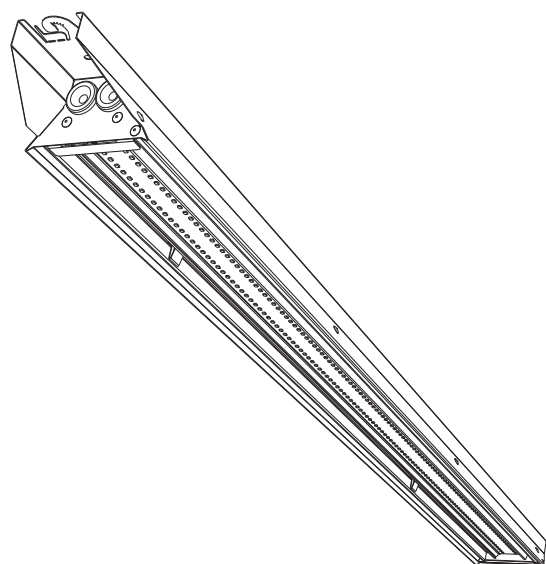



Fender

SLC1450
SLC1451

SLC1452
SLC1453

SLC
Scandinavian
Lighting Concept



POWER SELECTABLE

Fender 1500





Power/W	Current	30°	60°	90°	Sym	105°	Switch			
							1	2	3	4
38W	200mA		6460lm			6080lm	-	-	-	ON
46W	250mA		7820lm			7360lm	-	-	ON	-
55W	300mA		9350lm			8800lm	-	ON	-	-
64W	350mA		10880lm			10240lm	ON	-	-	-
75W	400mA		12750lm			12000lm	-	-	-	-

Fender 1200

Power/W	Current	30°	60°	90°	Sym	105°	Switch		
							1	2	3
33W	200mA		5610lm			5280lm	-	-	ON
42W	250mA		7140lm			6720lm	-	ON	-
50W	300mA		8500lm			8000lm	ON	-	-
60W	350mA		10200lm			9600lm	-	-	-

*Values is subject to change without notice

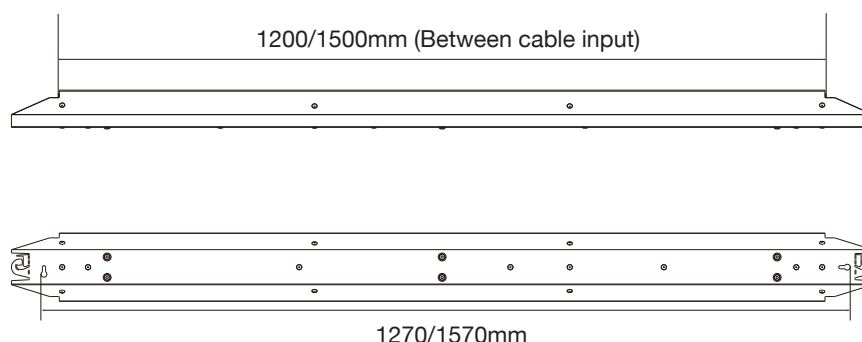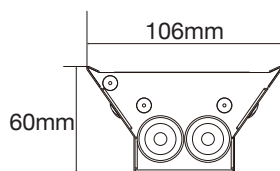


Circuit breakers



conventional	B10	B16	C10	C16
60W	10	16	17	27
75W	07	12	12	20

DALI	B10	B16	C10	C16
60W	13	20	21	34
75W	13	21	22	35

Linkable qty (2.5mm² wire through)

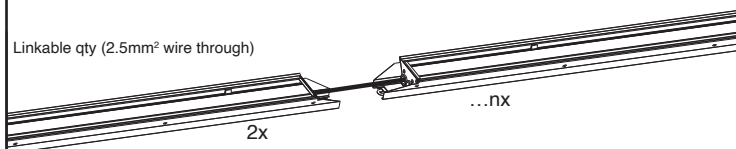

Input Voltage	NX	NX
230VAC	20(60W)	15(75W)



NO: Må installeres av godkjent installatør
EN: Only to be installed by an authorized electrician
DE: Nur von einer autorisierten Elektrofachkraft installieren lassen
FI: Asenna vain valtuutettu sähköasentaja
FR: Seulement pour être installé par un électricien autorisé
IS: Aðeins skal setja upp af viðurkenndum rafvirkni
ES: Solo para ser instalado por un electricista autorizado.
IT: Solo per essere installato da un elettricista autorizzato




NO: Slå av strømmen før montering
EN: Power off before installing
DE: Schalten Sie vor der Installation die Stromversorgung aus
FI: Katkaise virta ennen asennusta
FR: Couper le courant avant d'installer
IS: Slökkðu á orku áður en þú setur upp
ES: Apague la alimentación antes de instalar
IT: Spegnerne l'alimentazione prima di installare

Fender

SLC1450
SLC1451

SLC1452
SLC1453

SLC
Scandinavian
Lighting Concept

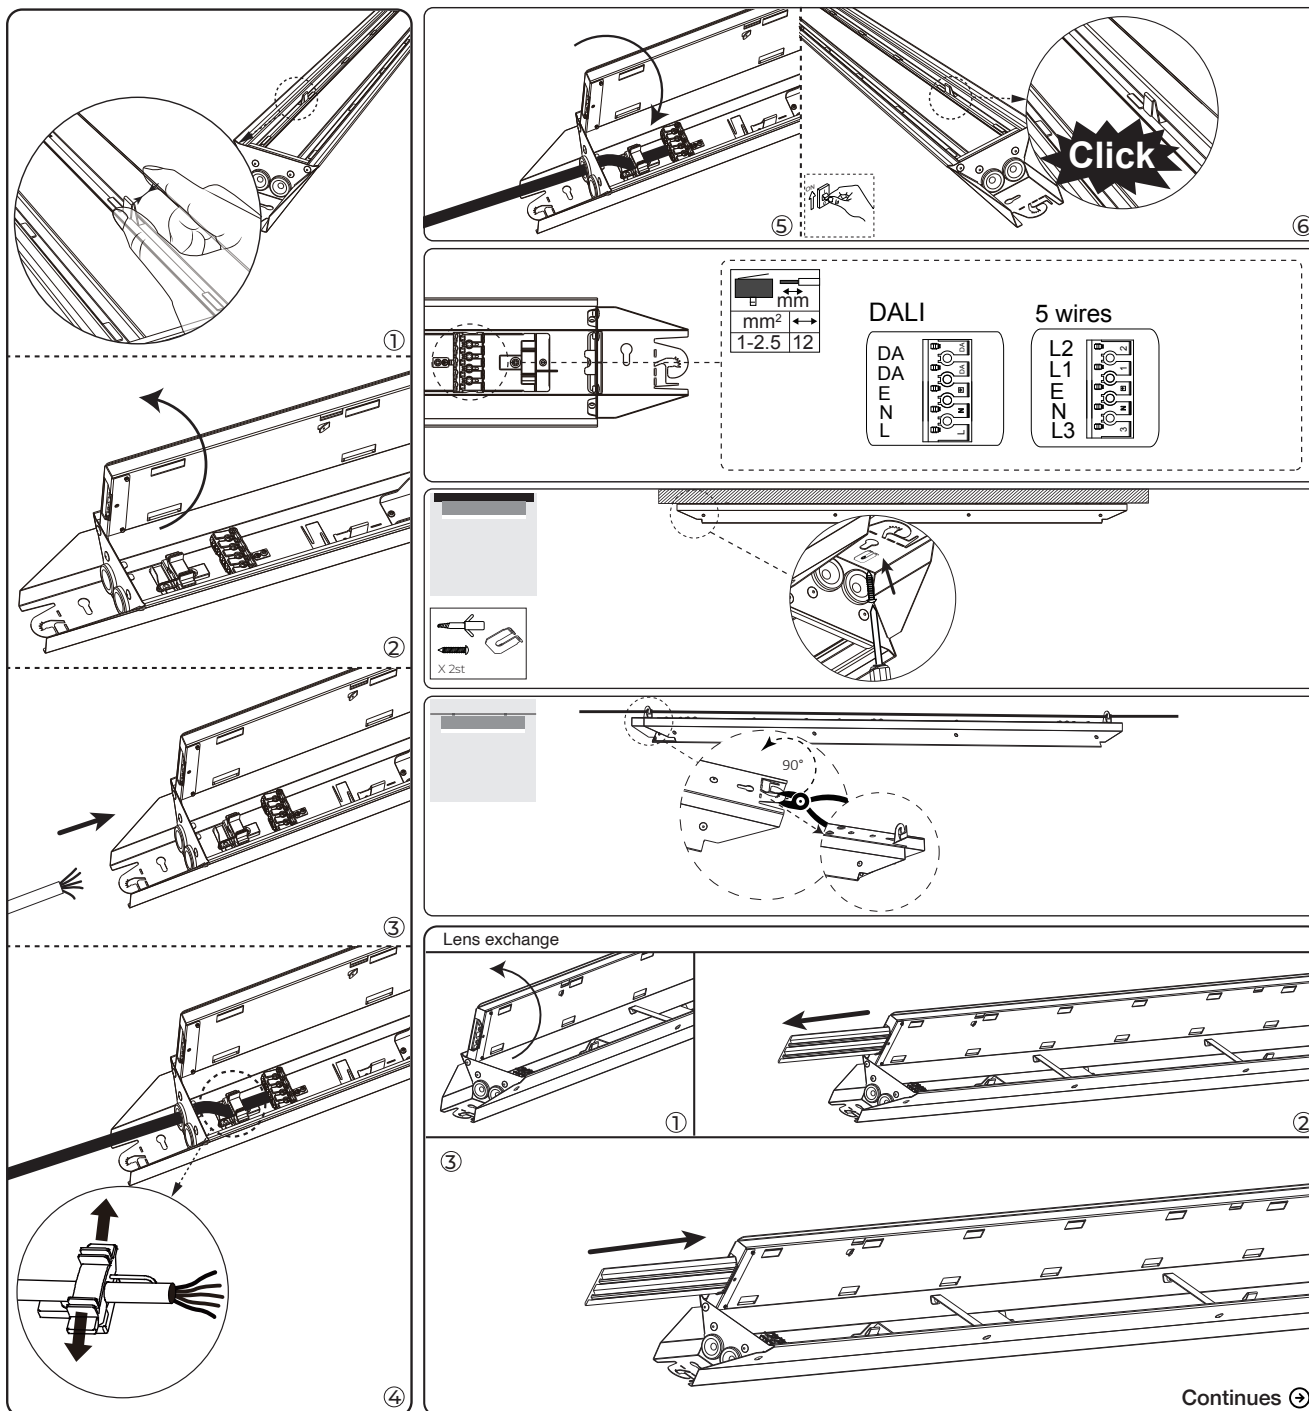



Fender

SLC1450
SLC1451

SLC1452
SLC1453

SLC
Scandinavian
Lighting Concept

- Press the clips firmly.
- Open the cover.
- Pull out the lenses, exchange to your preferred lens.
(Do not touch the LED's)
- Remove the protective coil and the nylon rivets on the PCB board, and then pull out the PCB board.
- Replacing the LED module or power supply.

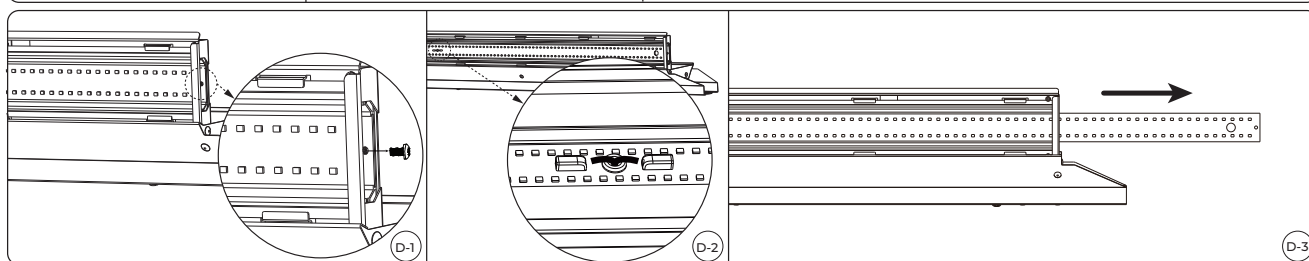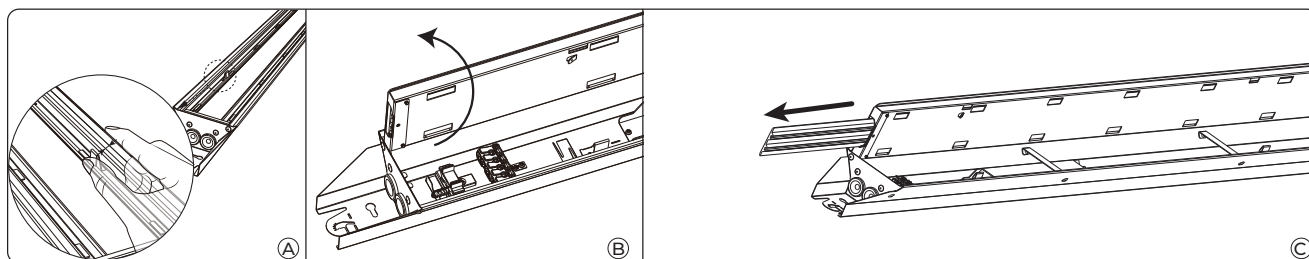

E

Lens exchange

Replace LED module

Replace the driver

CCT	EET
60W/75W(4000K)	C

Replaceable (LED only) light source by a professional.

Replaceable control gear by a professional.

Lenses	30°	60°	90°	105°	Sym
1200	SLC1454	SLC1455	SLC1456	SLC1457	SLC1458
1500	SLC1459	SLC1460	SLC1461	SLC1462	SLC1463

Choose the correct lens

